



JTSS-1600H

Panel Saw

JR043~230V, 50Hz

PARTS LIST




Импортер в РФ: ООО «ИТА Технолоджи»
105082, Москва, Переведеновский пер., д. 17
www.jettools.ru
Made in PRC / Сделано в КНР


P-JR043 JR099

2026-06


Parts Breakdown for JTSS-1600H Panel Saw--A

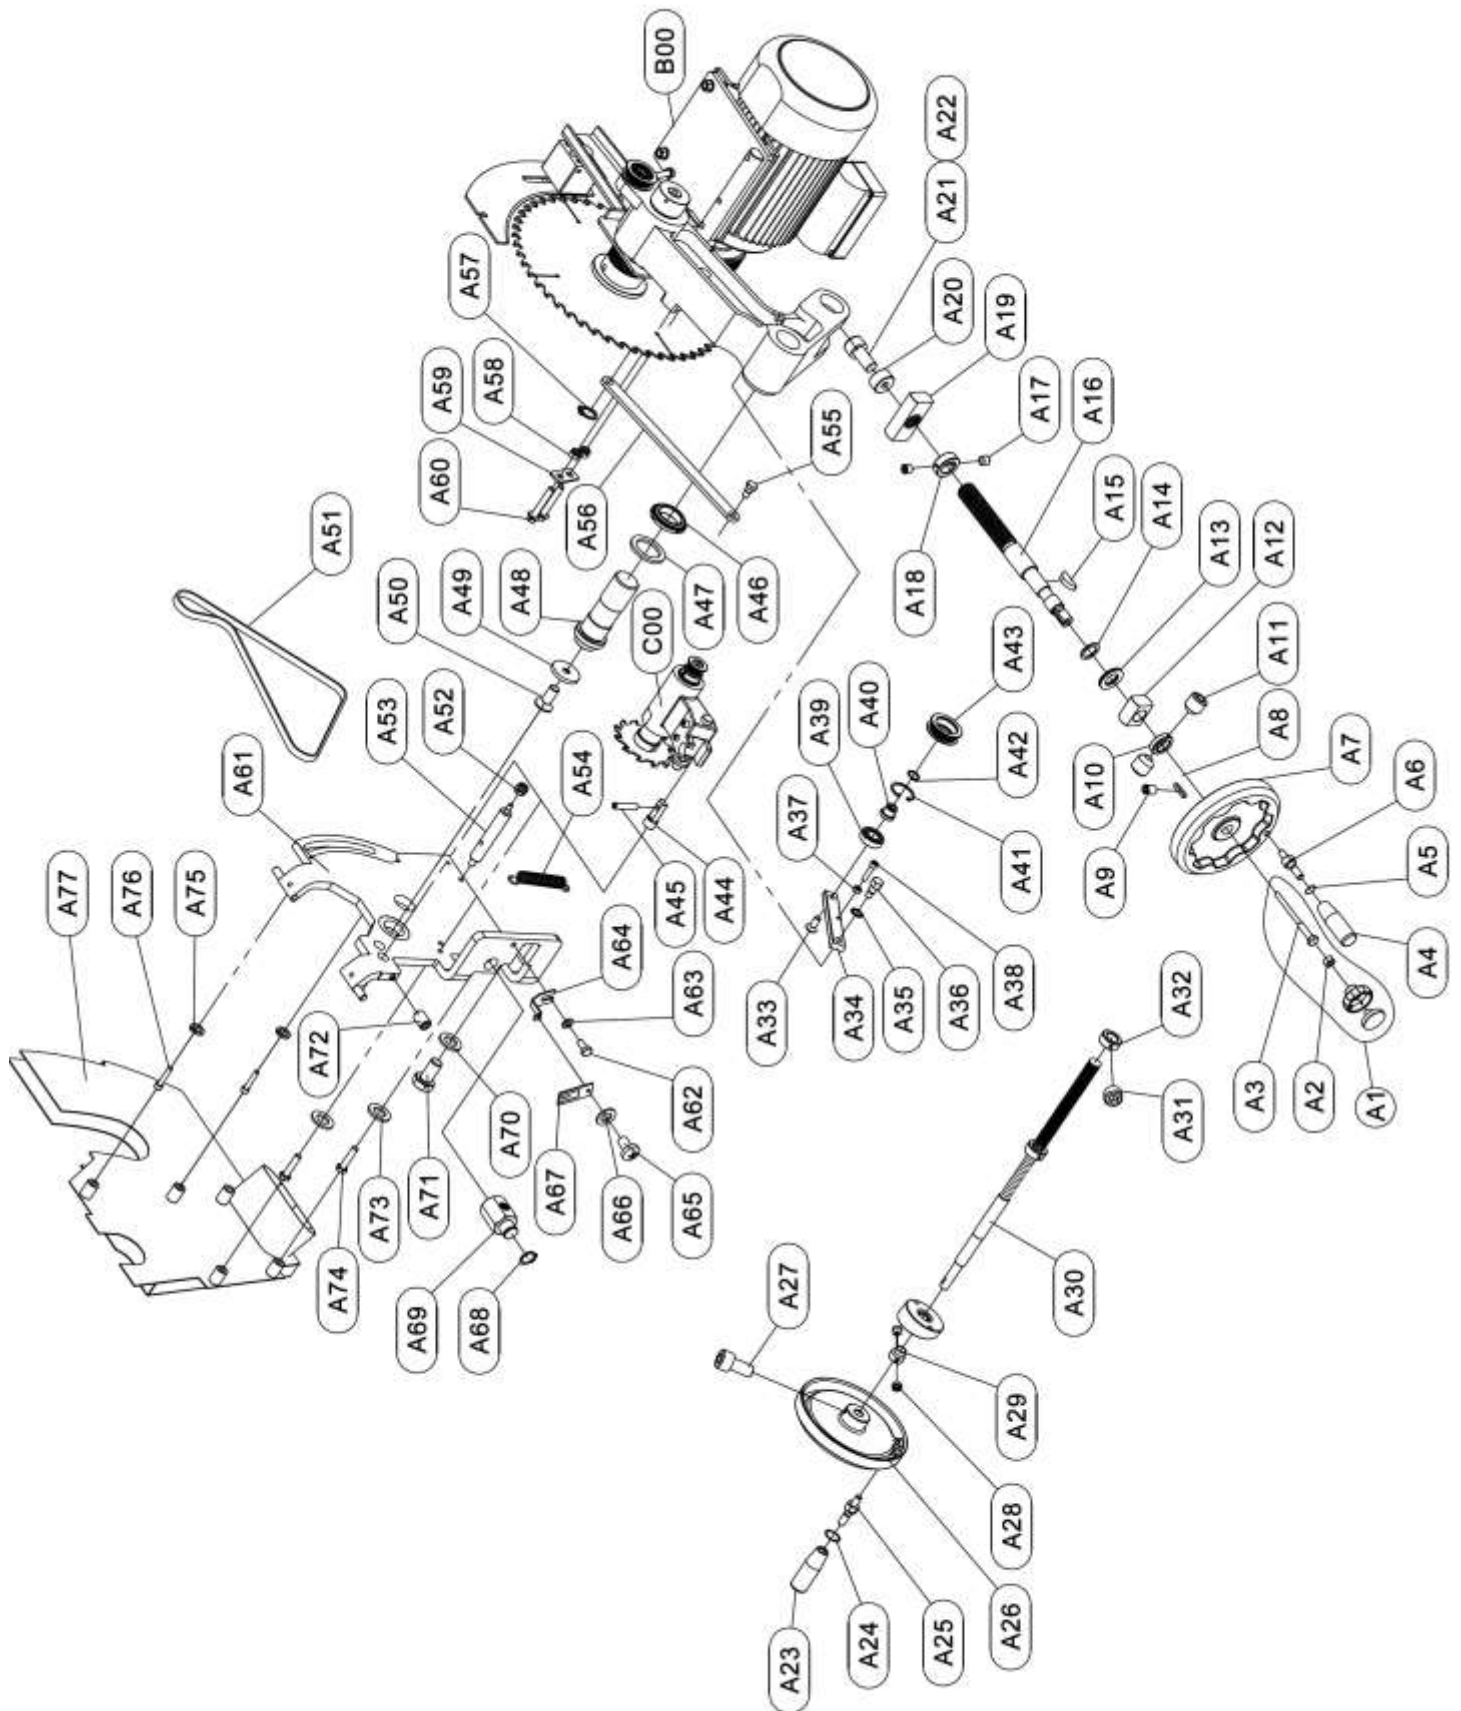


Parts Breakdown for JTSS-1600H Panel Saw—B&C

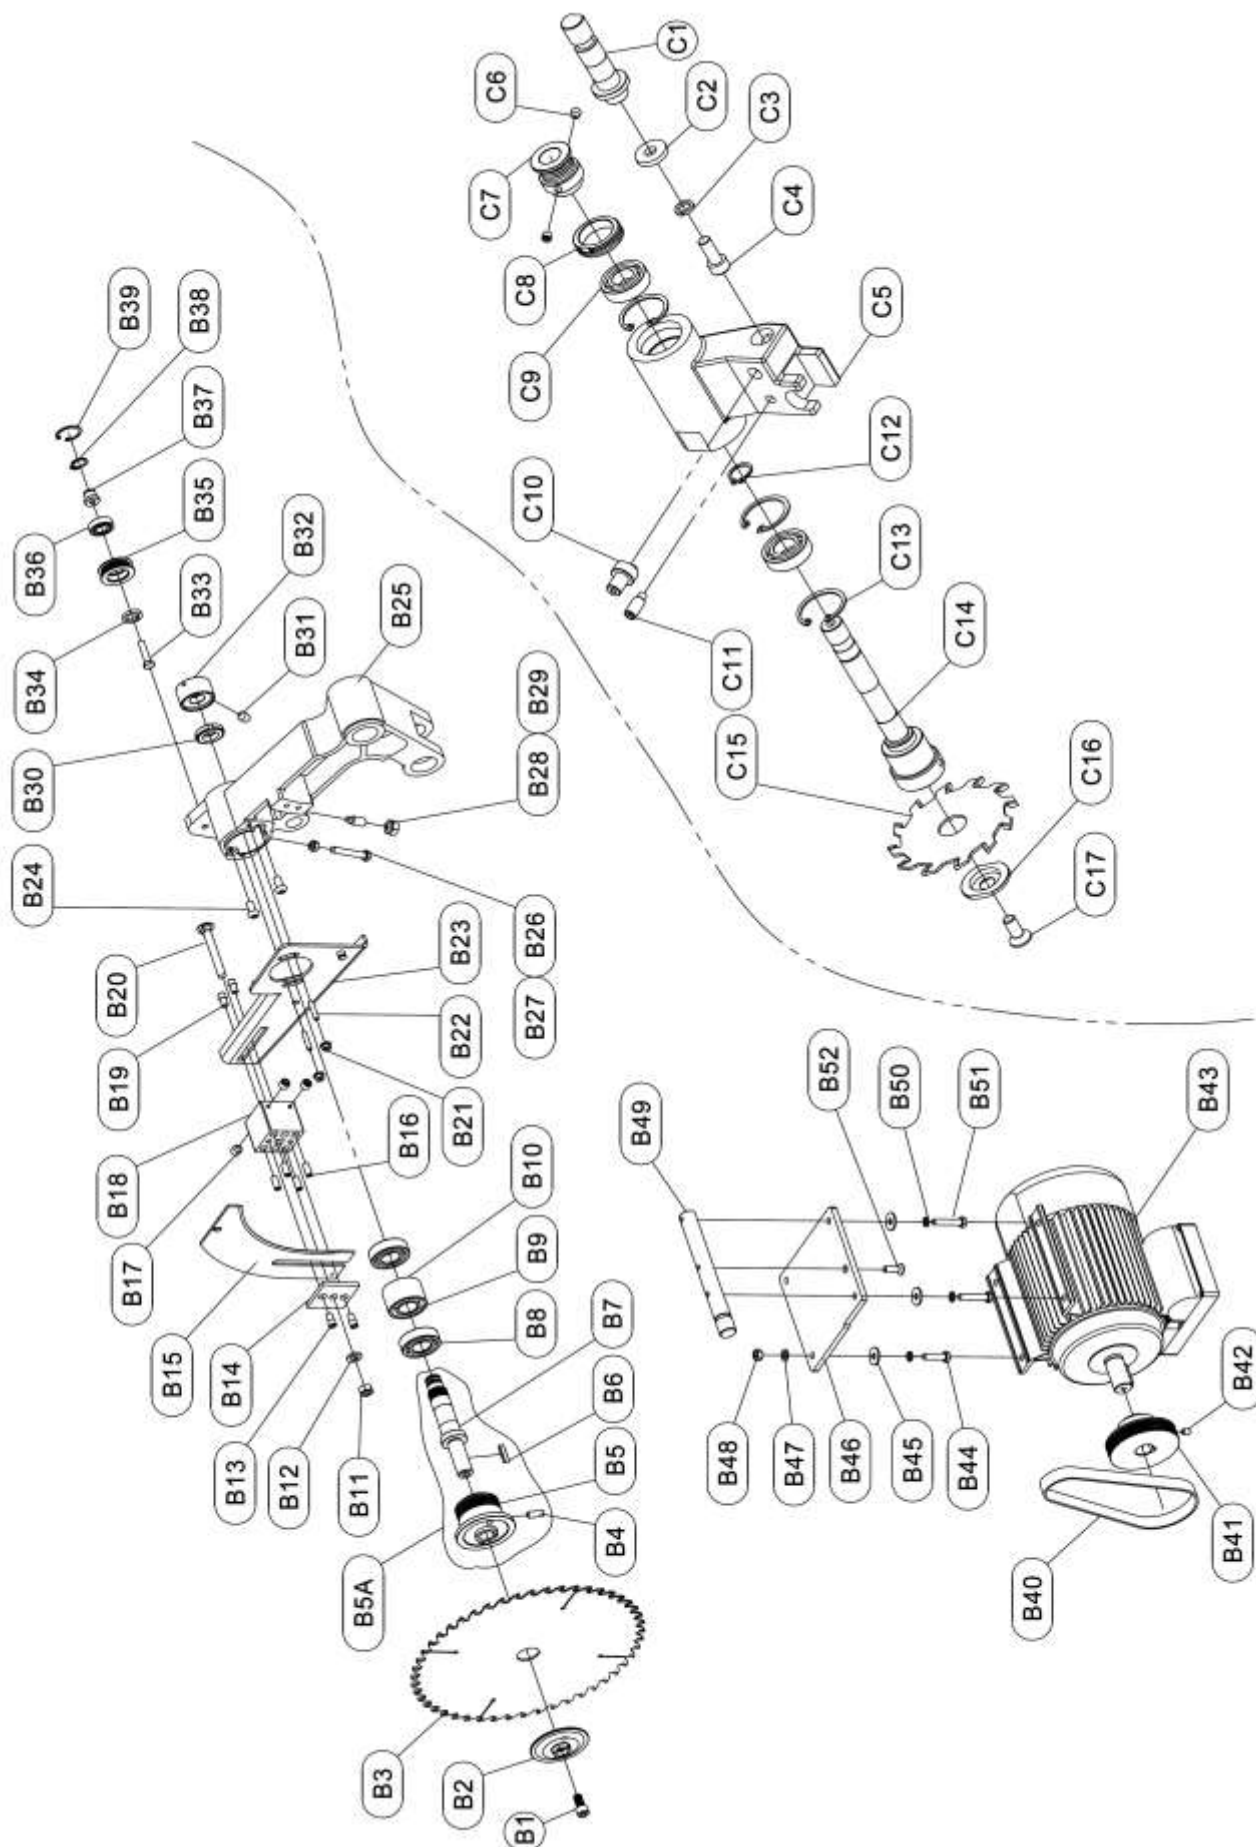

Parts Breakdown for JTSS-1600H Panel Saw—D

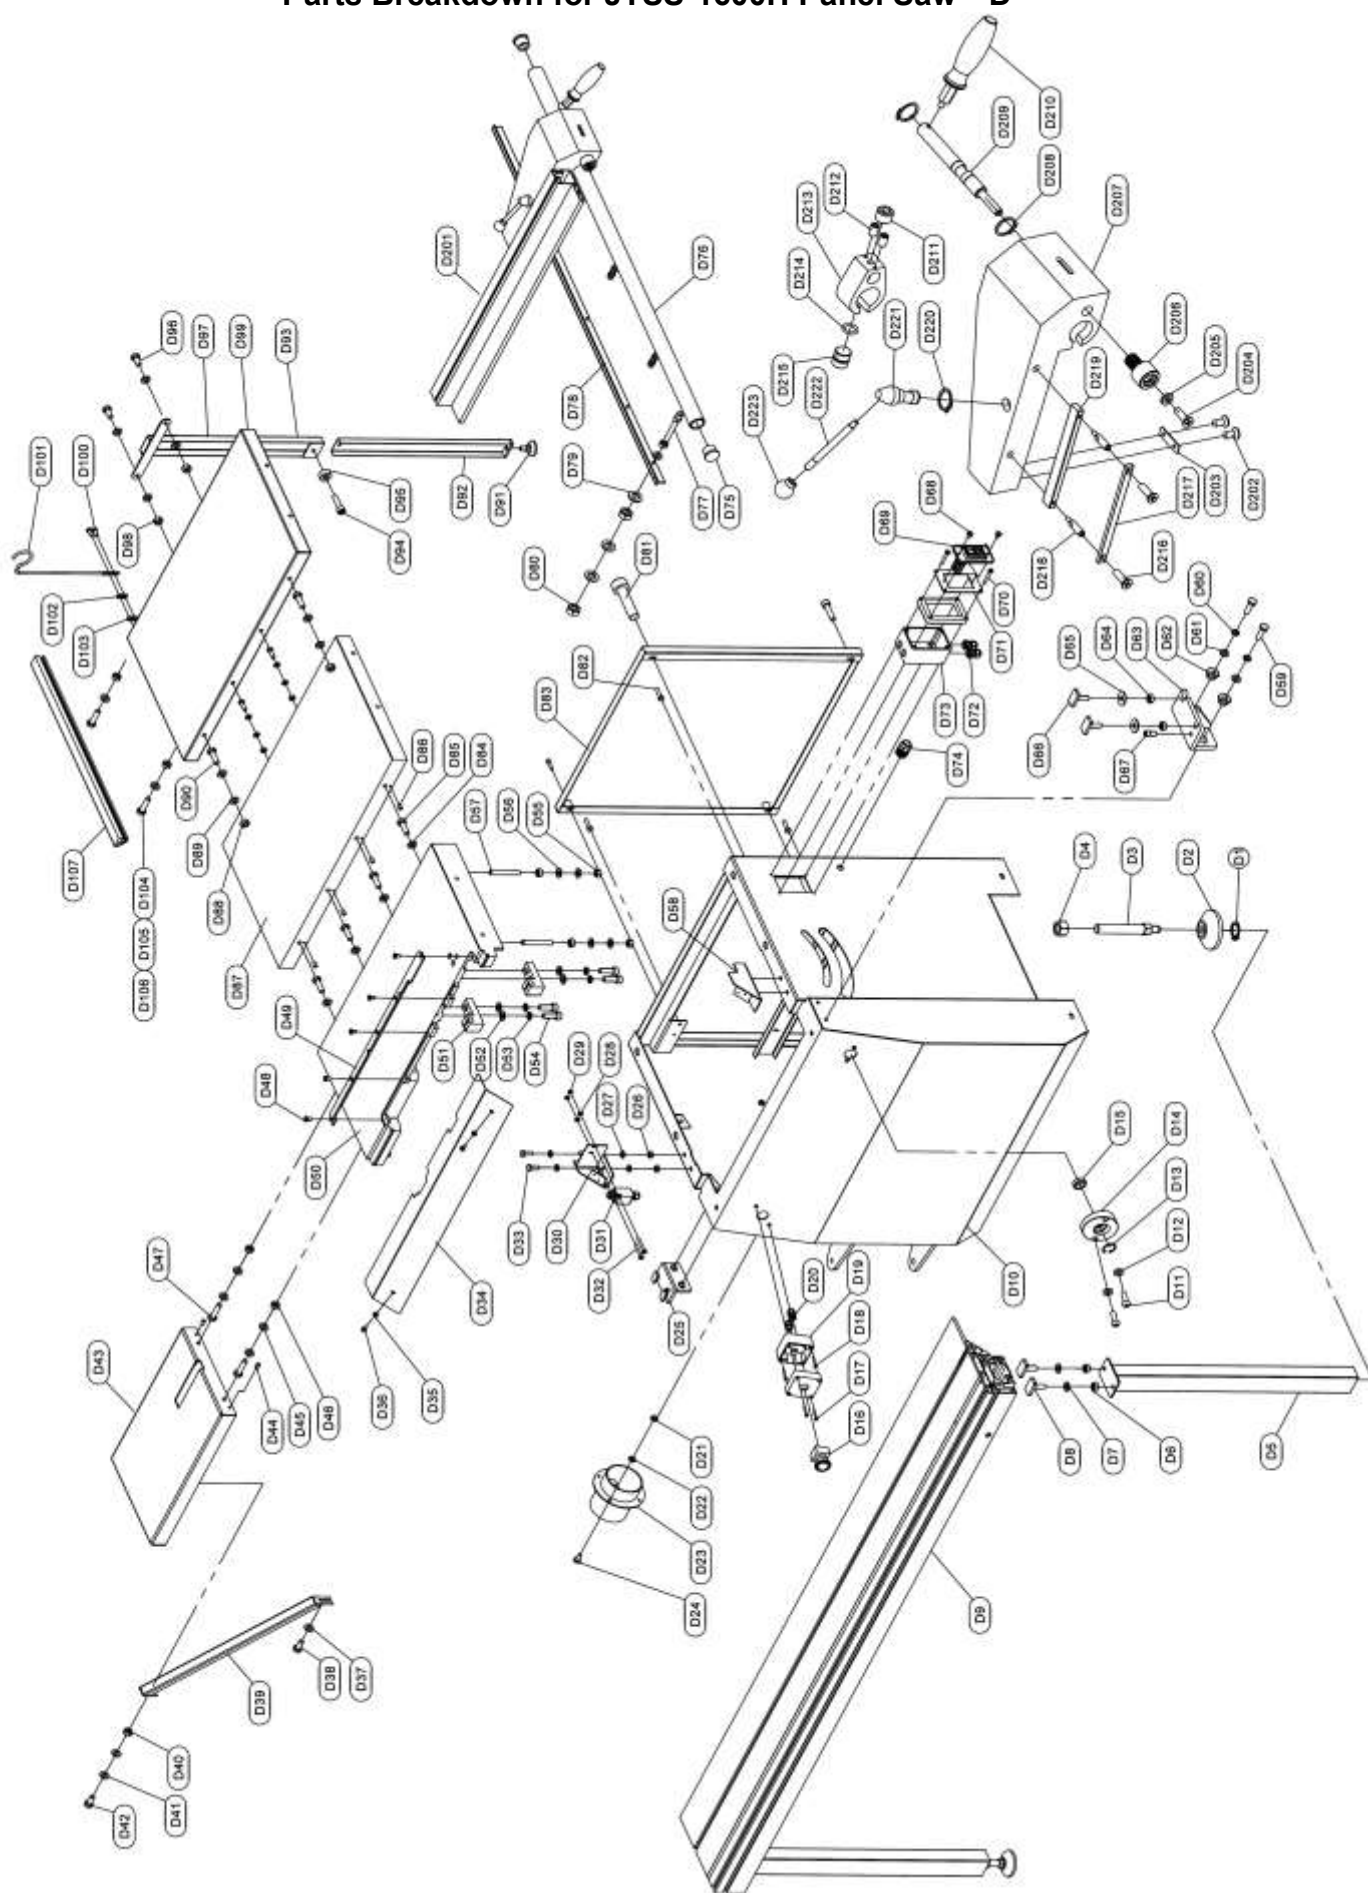

Parts Breakdown for JTSS-1600H Panel Saw—E

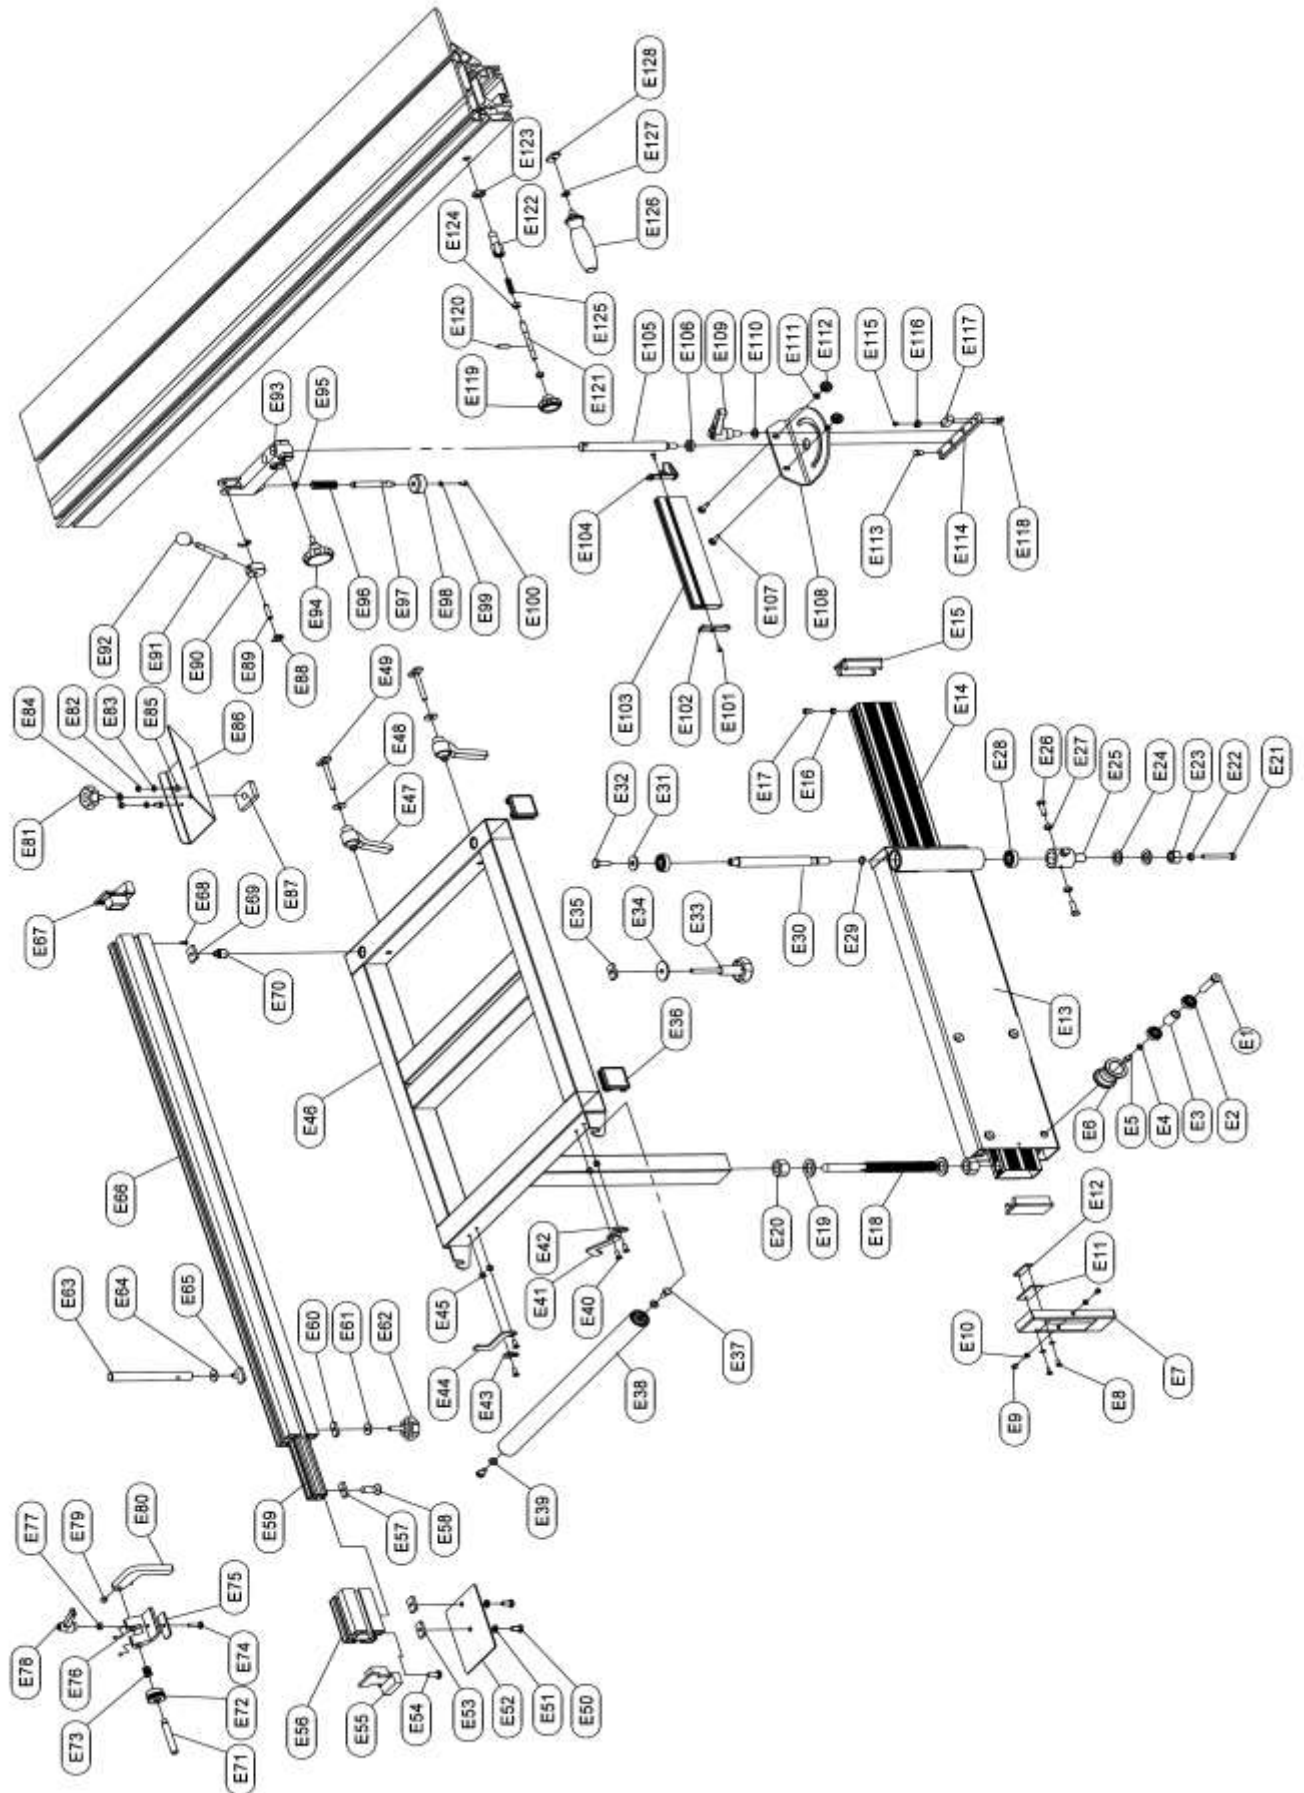

Parts List for JTSS-1600H Panel Saw

Index No.	Part No.	Description	Size	Qty
A1	JTSS1600H-A01	Lock Knob Assembly (#A1~#A3)		1
A2	GB41	Hex. nut	M8	1
A3	JTSS1600H-A03	Lock Bolt		1
A4	JTSS1600H-A04	Handle		1
A5	JTSS1600H-A05	Retaining Ring		1
A6	JTSS1600H-A06	Shaft		1
A7	JTSS1600H-A07	Hand Wheel		1
A8	JTSS1600H-A08	Key	A5X25	1
A9	GB79	Socket Set Screw	M5X8	1
A10	JTSS1600H-A10	Circle Ring		1
A11	GB79	Socket Set Screw	M6X6	2
A12	JTSS1600H-A12	Bearing Bush		1
A13	GB276	Bearing	20X35X4	1
A14	JTSS1600H-A14	Bearing Washer		1
A15	JTSS1600H-A15	SpecialKey		1
A16	JTSS1600H-A16	Thread		1
A17	GB78	Socket Set Screw	M6X6	2
A18	JTSS1600H-A18	Circle Ring		1
A19	JTSS1600H-A19	Nut		1
A20	JTSS1600H-A20	Limit Ring		1
A21	GB70.1	Socket Head Cap Screw	M10X20	1
A22	GB96	Flat Washer	Φ10	1
A23	JTSS1600H-A23	Handle		1
A24	JTSS1600H-A24	Retaining Ring		1
A25	JTSS1600H-A25	Shaft		1
A26	JTSS1600H-A26	Hand Wheel		1
A27	GB70.1	Socket Head Cap Screw	M8X16	1
A28	GB78	Socket Set Screw	M6X6	2
A29	JTSS1600H-A29	Bearing Bush		1
A30	JTSS1600H-A30	Thread		1
A31	GB79	Socket Set Screw	M6X6	2
A32	JTSS1600H-A32	Circle Ring		2
A33	GB819	Flat Head Cap Screw	M8X20	1
A34	JTSS1600H-A34	Tension rod		1
A35	JTSS1600H-A35	Wave Washer	Φ10	1
A36	JTSS1600H-A36	Pin Shaft		1
A37	GB41	Hex. Nut	M6	1
A38	GB70.1	Socket Head Cap Screw	M6X25	1
A39	GB276	Bearing	6002-2RS	1
A40	JTSS1600H-A40	Tension Shaft		1
A41	JTSS1600H-A41	C-Retaining Ring	Φ32	1
A42	JTSS1600H-A42	C-Retaining Ring	Φ15	1
A43	JTSS1600H-A43	Tension Pulley		1
A44	JTSS1600H-A44	Limit Shaft		1
A45	GB79	Socket Set Screw	M8X40	1
A46	GB41	Lock Nut	M35	1
A47	JTSS1600H-A47	Large Washer		1
A48	JTSS1600H-A48	Centre Shaft		1
A49	JTSS1600H-A49	Large Washer		1
A50	GB819	Flat Head Cap Screw	M10X25	1
A51	JTSS1600H-A50	Multi"V"Belt	4P737	1
A52	GB6170	Hex.Lock Nut	M6	1
A53	JTSS1600H-A53	Spring Shaft		1
A54	JTSS1600H-A54	Spring		1
A55	JTSS1600H-A55	Special Bolt		1
A56	JTSS1600H-A56	Link Rod		1

Parts List for JTSS-1600H Panel Saw

Index No.	Part No.	Description	Size	Qty
A57	JTSS1600H-A57	C-Retaining Ring	Φ10	1
A58	GB6170	Hex.Lock Nut	M8	2
A59	JTSS1600H-A59	Sliding plate		1
A60	GB5783	Hex. Flange Bolt	M8X50	2
A61	JTSS1600H-A61	Swing Base		1
A62	GB5781	Hex. Cap Screw	M8X16	1
A63	GB96	Flat Washer	Φ8	1
A64	JTSS1600H-A64	Link plae		1
A65	GB818	Pan Head Cap Screw	M5X8	1
A66	GB96	Flat Washer	Φ5	1
A67	JTSS1600H-A67	Plastic Pionter		1
A68	JTSS1600H-A68	C-Retaining Ring	Φ20	1
A69	JTSS1600H-A69	Hex. nut		1
A70	GB96	Flat Washer	Φ8	1
A71	GB5781	Hex. Cap Screw	M8X16	1
A72	GB79	Socket Set Screw	M8X12	1
A73	GB96	Flat Washer	Φ8	2
A74	GB5781	Hex.Cap Screw	M8X35	2
A75	GB93	Spring Washer	Φ6	3
A76	GB70.1	Socket Head Cap Screw	M6X30	3
A77	JTSS1600H-A77	Chip House		1
B1	JTSS1600H-B1	Screw	M10X20-L	1
B2	JTSS1600H-B2	Flange		1
B3	JTSS1600H-B3	Main Blade		1
B4	GB80	Flat Set Screw	M6X16	1
B5A	JTSS1600H-B5A	Main Shaft Assembly (#B4~#B7)		1
B5	JTSS1600H-B5	Pulley		1
B6	JTSS1600H-B6	Key	A6X28	1
B7	JTSS1600H-B7	Main Shaft		1
B8	GB276	Bearing	6205	2
B9	JTSS1600H-B9	Inner Spacer		1
B10	JTSS1600H-B10	Outer Spacer		1
B11	GB41	Hex. Nut	M10	1
B12	GB96	Flat Washer	Φ10	1
B13	JTSS1600H-B13	Stop Screw		2
B14	JTSS1600H-B14	Clamp Plate		1
B15	JTSS1600H-B15	Riving Knife		1
B16	GB79	Socket Set Screw	M8X20	4
B17	GB80	Socket Set Screw	M6X6	4
B18	JTSS1600H-B18	Space Block		1
B19	JTSS1600H-B19	Stop Screw		2
B20	JTSS1600H-B20	Carriage Bolt	M10X80	1
B21	GB6170	Hex. Lock Nut	M6	2
B22	GB80	Socket Set Screw	M6X30	2
B23	JTSS1600H-B23	Riving Wedge		1
B24	GB70.2	Socket Head Cap Screw	M6X12	2
B25	JTSS1600H-B25	Shaft Support		1
B26	GB41	Hex. Nut	M8	1
B27	GB5781	Hex. Cap Screw	M8X55	1
B28	GB79	Socket Set Screw	M8X20	1
B29	GB41	Hex. Nut	M8	1
B30	JTSS1600H-B30	Retaining Nut	M25	1
B31	GB79	Socket Set Screw	M6X8	1
B32	JTSS1600H-B32	Pulley		1
B33	GB5781	Hex.Cap Screw	M8X35	1
B34	GB93	Spring Washer	Φ8	1
B35	JTSS1600H-B35	Tension Pulley		1

Parts List for JTSS-1600H Panel Saw

Index No.	Part No.	Description	Size	Qty
B36	GB276	Bearing	6002	1
B37	JTSS1600H-B37	Tension Shaft		1
B38	JTSS1600H-B38	C-Retaining Ring	Φ15	1
B39	JTSS1600H-B39	C-Retaining Ring	Φ32	1
B40	JTSS1600H-B40	Multi "V" Belt	7P560	1
B41	JTSS1600H-B41	Motor Pulley		1
B42	GB79	Socket Set Screw	M8X10	2
B43	JTSS1600H-B43M	Motor	~230V	1
	JTSS1600H-B43T	Motor	4~400V	1
B44	GB5781	Hex. Cap Screw	M8X30	2
B45	GB96	Large Washer	Φ8	1
B46	JTSS1600H-B46	Motor Base		1
B47	GB96	Flat Washer	Φ8	2
B48	GB41	Hex. Nut	M8	2
B49	JTSS1600H-B49	Shaft		1
B50	GB5781	Hex. Cap Screw	M8X40	2
B51	GB93	Spring Washer	Φ8	4
B52	GB819	Flat Head Cap Screw	M8X25	1
C1	JTSS1600H-C01	Sliding Shaft		1
C2	JTSS1600H-C02	Shaft Washer		1
C3	GB93	Spring Washer	Φ8	1
C4	GB70.1	Socket Head Cap Screw	M8X20	1
C5	JTSS1600H-C05	Shaft Support (Scoring Blade)		1
C6	GB80	Socket Set Screw	M6X6	2
C7	JTSS1600H-C07	Scoring Blade pulley		1
C8	JTSS1600H-C08	Circle Nut		1
C9	GB276	Bearing	6002-2RS	2
C10	JTSS1600H-C10	Eccentric Shaft		1
C11	GB80	Socket Set Screw	M8X20	1
C12	JTSS1600H-C12	C-Retaining Ring	Φ15	1
C13	JTSS1600H-C13	C-Retaining Ring	Φ32	3
C14	JTSS1600H-C14	Scoring Blade Shaft		1
C15	JTSS1600H-C15	Scoring Blade		1
C16	JTSS1600H-C16	Scoring Blade Flange		1
C17	GB819	Flat Head Cap Screw	M8X20	1
D1	JTSS1600H-D01	C-Retaining Ring	Φ12	2
D2	JTSS1600H-D02	Adjustable Disc		2
D3	JTSS1600H-D03	Adjustable Bolt		2
D4	GB41	Hex. Nut	M16	2
D5	JTSS1600H-D05	Support Tube		2
D6	GB41	Hex. Nut	M6	4
D7	GB96	Flat Washer	Φ6	4
D8	JTSS1600H-D08	T-Bolt		4
D9	JTSS1600H-D09	Sliding Panel Set		1
D10	JTSS1600H-D10	Saw Frame		1
D11	GB70.2	Socket Head CapScrew	M8X25	2
D12	GB96	Flat Washer	Φ8	2
D13	JTSS1600H-D13	C-Retaining Ring	Φ22	1
D14	JTSS1600H-D14	Bearing Base		1
D15	GB276	Bearing	GE12E	1
D16	JTSS1600H-D16	E-Stop Switch		1
D17	GB819	Flat Head Cap Screw	M4X35	2
D18	GB818	Pan Head Cap Screw	M4X35	2
D19	JTSS1600H-D19	E-Stop Switch Box		1
D20	JTSS1600H-D20	Cable Gland	M16	1
D21	GB41	Hex. Nut	M6	4
D22	GB96	Flat Washer	Φ6	4

Parts List for JTSS-1600H Panel Saw

Index No.	Part No.	Description	Size	Qty
D23	JTSS1600H-D23	Dust port		1
D24	GB818	Pan Head Cap Screw	M6X12	4
D25	JTSS1600H-D25	Front Bracket		1
D26	GB41	Hex. Nut	M6	4
D27	GB96	Flat Washer	Φ6	8
D28	GB96	Flat Washer	Φ4	2
D29	GB41	Hex. Nut	M4	2
D30	JTSS1600H-D30	BackAngle Support Bracket		1
D31	JTSS1600H-D31	Safety Switch	QKS9	1
D32	GB818	Pan Head CapScrew	M4X30	2
D33	GB5781	Hex. Cap Screw	M6X16	4
D34	JTSS1600H-D34	Guard Plate		1
D35	GB96	Flat Washer	Φ4	2
D36	GB818	Pan Head Cap Screw	M4X10	2
D37	GB96	Flat Washer	Φ8	1
D38	GB5781	Hex. Cap Screw	M8X16	1
D39	JTSS1600H-D39	Rear Table Support		1
D40	GB41	Hex. Nut	M8	1
D41	GB96	Flat Washer	Φ8	2
D42	GB5781	Hex. Cap Screw	M8X16	1
D43	JTSS1600H-D43	Rear Table		1
D44	GB80	Socket Set Screw	M6X10	2
D45	GB96	Flat Washer	Φ8	4
D46	GB41	Hex. Nut	M8	2
D47	GB5781	Hex. Cap Screw	M8X30	2
D48	GB819	Flat Head Cap Screw	M5X10	5
D49	JTSS1600H-D49	Table Insert		1
D50	JTSS1600H-D50	Main Table		1
D51	JTSS1600H-D51	Rotating Support		2
D52	GB96	Flat Washer	Φ8	4
D53	GB93	Spring Washer	Φ8	4
D54	GB70.1	Socket Head Cap Screw	M8X25	4
D55	GB41	Hex. Nut	M12	8
D56	GB96	Flat Washer	Φ12	8
D57	GB79	Socket Set Screw	M12X85	4
D58	JTSS1600H-D58	Front Angle Support Bracket		1
D59	GB5781	Hex. Cap Screw	M8X25	4
D60	GB93	Spring Washer	Φ8	4
D61	GB96	Flat Washer	Φ8	4
D62	JTSS1600H-D62	Eccentric Bush		4
D63	JTSS1600H-D63	Back Bracket		1
D64	GB41	Hex. Nut	M8	4
D65	GB96	Large Washer	Φ8	4
D66	JTSS1600H-D66	T-Bolt		4
D67	JTSS1600H-D67	Special Bolt		2
D68	GB818	Pan Head Cap Screw	M5X8	2
D69	JTSS1600H-D69M	Main Switch 230V	DZ07 230V	1
	JTSS1600H-D69T	Main Switch 400V	DZ07C 400V	1
D70	GB818	Pan Head Cap Screw	M4X32	4
D71	JTSS1600H-D71	Plate		1
D72	JTSS1600H-D72	Cable Gland	M16	2
D73	JTSS1600H-D73	Switch Box	KJDH	1
D74	JTSS1600H-D74	Cable Gland	M16	1
D75	JTSS1600H-D75	Rubber End		2
D76	JTSS1600H-D76	Guide		1

Parts List for JTSS-1600H Panel Saw

Index No.	Part No.	Description	Size	Qty
D77	JTSS1600H-D77	Dual Head Bolt		4
D78	JTSS1600H-D78	Ruler Support		1
D79	GB96	Flat Washer	Φ8	16
D80	GB41	Hex. Nut	M8	12
D81	GB70.1	Socket Head Cap Screw	M6X25	4
D82	JTSS1600H-D82	Plastic Bolt	M8X30	4
D83	JTSS1600H-D83	Protective Cover		1
D84	GB96	Flat Washer	Φ8	4
D85	GB5781	Hex. Cap Screw	M8X25	4
D86	GB78	Socket Set Screw	M6X10	4
D87	JTSS1600H-D87	Extension Table		1
D88	GB41	Hex. Nut	M8	4
D89	GB96	Flat Washer	Φ8	8
D90	GB5781	Hex. Cap Screw	M8X25	4
D91	JTSS1600H-D91	Adjustable Disc		1
D92	JTSS1600H-D92	Lower Support		1
D93	JTSS1600H-D93	Upper Support		1
D94	GB70.1	Socket Head Cap Screw	M8X30	1
D95	JTSS1600H-D95	Clamp Disc		1
D96	GB5781	Hex. Cap Screw	M8X16	2
D97	GB96	Flat Washer	Φ8	4
D98	GB41	Hex. Nut	M8	2
D99	JTSS1600H-D99	Steel Extension Table		1
D100	GB818	Pan Head Cap Screw	M5X12	2
D101	JTSS1600H-D101	Dust Hose Support		1
D102	GB96	Flat Washer	Φ5	2
D103	GB41	Hex. Nut	M5	2
D104	GB41	Hex. Nut	M8	4
D105	GB96	Flat Washer	Φ8	4
D106	GB5781	Hex. Cap Screw	M8X30	4
D107	JTSS1600H-D107	Rear Rail		1
D201	JTSS1600H-D201	Fence		1
D202	GB819	Flat Head Cap Screw	M5X10	2
D203	JTSS1600H-D203	Sliding Plate		1
D204	GB819	Flat Head Cap Screw	M5X16	1
D205	JTSS1600H-D205	Washer		1
D206	JTSS1600H-D206	Thread Bush		1
D207	JTSS1600H-D207	Fence Seat		1
D208	JTSS1600H-D208	C-Retaining Ring	Φ20	2
D209	JTSS1600H-D209	Eccentric Shaft		1
D210	JTSS1600H-D210	Lock Handle		1
D211	GB79	Socket Set Screw	M12X10	1
D212	GB79	Socket Set Screw	M6X10	2
D213	JTSS1600H-D213	Micro-adjust Bracket		1
D214	JTSS1600H-D214	O Ring		1
D215	JTSS1600H-D215	Lock Block		1
D216	GB819	Flat Head Cap Screw	M5X16	2
D217	JTSS1600H-D217	Lock Plate		1
D218	JTSS1600H-D218	Position Shaft		2
D219	JTSS1600H-D219	Link Plate		1
D220	JTSS1600H-D220	C-Retaining Ring	Φ20	1
D221	JTSS1600H-D221	Lock Shaft		1
D222	JTSS1600H-D222	Lock Lever		1
D223	JTSS1600H-D223	Hand Ball		1

Parts List for JTSS-1600H Panel Saw

Index No.	Part No.	Description	Size	Qty
E1	JTSS1600H-E01	Eccentric Shaft		4
E2	GB276	Bearing	6001	8
E3	JTSS1600H-E03	Spacer		4
E4	GB96	Flat Washer	Φ6	4
E5	GB70.1	Socket Head Cap Screw	M6X12	4
E6	JTSS1600H-E06	Roll		4
E7	JTSS1600H-E07	Protective Cover		2
E8	GB818	Pan Head Cap Screw	M5X10	4
E9	GB818	Pan Head Cap Screw	M5X8	4
E10	GB96	Flat Washer	Φ5	8
E11	JTSS1600H-E11	Block		2
E12	JTSS1600H-E12	Woolen Sheet		2
E13	JTSS1600H-E13	Swing Arm		1
E14	JTSS1600H-E14	Extension Tube		1
E15	JTSS1600H-E15	End Cap		2
E16	GB41	Hex. Nut	M6	1
E17	GB70.1	Socket Head Cap Screw	M6X10	1
E18	JTSS1600H-E18	Support Rod		1
E19	GB96	Flat Washer	Φ20	2
E20	GB41	Hex. Nut	M20	2
E21	GB5781	Hex. Cap Screw	M8X60	1
E22	GB41	Hex. Nut	M8	1
E23	GB41	Hex. Nut	M16	1
E24	GB96	Flat Washer	Φ16	2
E25	JTSS1600H-E25	Stop Collar		1
E26	GB5781	Hex. Cap Screw	M8X25	4
E27	GB41	Hex. Nut	M8	4
E28	GB276	Bearing	6202	2
E29	JTSS1600H-E29	C-Retaining Ring	Φ15	1
E30	JTSS1600H-E30	Shaft		1
E31	GB96	Large Washer	Φ10	1
E32	GB5781	Hex. Cap Screw	M10X25	1
E33	JTSS1600H-E33	Long Handle		1
E34	JTSS1600H-E34	Large Washer		1
E35	JTSS1600H-E35	T Bolt		1
E36	JTSS1600H-E36	End Cap		4
E37	GB5781	Hex. Cap Screw	M8X12	2
E38	JTSS1600H-E38	Roller		1
E39	GB96	Flat Washer	Φ8	2
E40	GB819	Flat Head Cap Screw	M6X16	4
E41	JTSS1600H-E41	Z-Lock Plate		1
E42	JTSS1600H-E42	Eccentric Cam		1
E43	JTSS1600H-E43	Z-Lock Plate		1
E44	JTSS1600H-E44	Eccentric Cam		1
E45	GB6170	Hex. Lock Nut	M6	4
E46	JTSS1600H-E46	Cross Cut Table		1
E47	JTSS1600H-E47	Lock Handle		2
E48	GB96	Large Washer	Φ8	2
E49	JTSS1600H-E49	T Bolt		2
E50	GB5781	Hex. Cap Screw	M8X12	2
E51	GB96	Flat Washer	Φ8	2
E52	JTSS1600H-E52	Lock Plate		1
E53	JTSS1600H-E53	T Nut		2
E54	GB818	Pan Head Cap Screw	M4X10	1
E55	JTSS1600H-E55	End Cap		1
E56	JTSS1600H-E56	End Extension Fence		1

Parts List for JTSS-1600H Panel Saw

Index No.	Part No.	Description	Size	Qty
E57	 JTSS1600H-E57	 T Nut		1
E58	 GB819	 Flat Head Cap Screw.....	M6X16	1
E59	 JTSS1600H-E59	 Extension Fence		1
E60	 JTSS1600H-E60	 T Nut		1
E61	 GB96	 Large Washer	Φ8	1
E62	 JTSS1600H-E62	 Handle.....		1
E63	 JTSS1600H-E63	 Stud Hold Down		1
E64	 GB96	 Large Washer	Φ8	1
E65	 JTSS1600H-E65	 T Bolt.....		1
E66	 JTSS1600H-E66	 Scale Fence		1
E67	 JTSS1600H-E67	 End Cap		1
E68	 GB818	 Pan Head Cap Screw	M4X10	1
E69	 JTSS1600H-E69	 T Nut		1
E70	 JTSS1600H-E70	 Centre Pin		1
E71	 JTSS1600H-E71	 Stud.....		1
E72	 JTSS1600H-E72	 Knob.....		1
E73	 JTSS1600H-E73	 Spring.....		1
E74	 JTSS1600H-E74	 Carriage Bolt.....	M6X25	1
E75	 JTSS1600H-E75	 Square Hole Plate.....		1
E76	 JTSS1600H-E76	 Flip Stop Base		1
E77	 JTSS1600H-E77	 Space Ring		1
E78	 JTSS1600H-E78	 Lock Handle		1
E79	 GB79	 Socket Set Screw	M5X5	3
E80	 JTSS1600H-E80	 Flip Stop.....		1
E81	 JTSS1600H-E81	 Lock Knob.....		1
E82	 GB41	 Hex. Nut	M6	2
E83	 GB96	 Flat Washer	Φ6	2
E84	 GB96	 Flat Washer	Φ8	1
E85	 JTSS1600H-E85	 Slide Pin.....		2
E86	 JTSS1600H-E86	 Pressure Plate		1
E87	 JTSS1600H-E87	 T Nut		1
E88	 JTSS1600H-E88	 "E" Ring	Φ6	2
E89	 JTSS1600H-E89	 Pin		1
E90	 JTSS1600H-E90	 Eccentric Cam		1
E91	 JTSS1600H-E91	 Handle.....		1
E92	 JTSS1600H-E92	 Hand Ball		1
E93	 JTSS1600H-E93	 Swing Arm		1
E94	 JTSS1600H-E94	 Lock Handle		1
E95	 JTSS1600H-E95	 C-Retaining Ring	Φ12	1
E96	 JTSS1600H-E96	 Spring.....		1
E97	 JTSS1600H-E97	 Stud.....		1
E98	 JTSS1600H-E98	 Pressure Disc		1
E99	 GB96	 Flat Washer	Φ5	1
E100	 GB70.1	 Socket Head Cap Screw.....	M5X10	1
E101	 GB818	 Pan Head Cap Screw	ST4.8X9.5.....	2
E102	 JTSS1600H-E102	 End Cap		1
E103	 JTSS1600H-E103	 Angle Fence.....		1
E104	 JTSS1600H-E104	 End Cap		1
E105	 JTSS1600H-E105	 Stud.....		1
E106	 JTSS1600H-E106	 Washer.....		1
E107	 JTSS1600H-E107	 Carriage Bolt.....	M6X25	2
E108	 JTSS1600H-E108	 Mitre Gauge		1
E109	 JTSS1600H-E109	 Lock Handle		1
E110	 GB96	 Flat Washer	Φ10	1
E111	 GB96	 Flat Washer	Φ6	1
E112	 JTSS1600H-E112	 Lock Knob		2
E113	 JTSS1600H-E113	 Stop Pin		1

Parts List for JTSS-1600H Panel Saw


Index No.	Part No.	Description	Size	Qty
E114 ...	JTSS1600H-E114	Guide Rod		1
E115 ...	GB818	Pan Head Cap Screw	M4X6	1
E116 ...	JTSS1600H-E116	Indicator		1
E117 ...	JTSS1600H-E117	Indicator Base		1
E118 ...	GB819	Flat Head Cap Screw	M4X12	2
E119 ...	JTSS1600H-E119	Lock Handle		1
E120 ...	JTSS1600H-E120	Spring Pin	3X12	1
E121 ...	JTSS1600H-E121	Position Pin		1
E122 ...	JTSS1600H-E122	Position Collar		1
E123 ...	JTSS1600H-E123	Hex. Thin Nut	M14	1
E124 ...	GB41	Hex. Nut	M8	2
E125 ...	JTSS1600H-E125	Spring		1
E126 ...	JTSS1600H-E126	Push Handle		1
E127 ...	GB96	Flat Washer	Φ8	1
E128 ...	JTSS1600H-E128	T Nut		1
.....	JTSS1600H-ID	ID Label (not shown)		1
.....	JTSS1600H-ML	Motor Label (not shown)		1
.....	JTSS1600H-JET	JET LOGO (not shown)		1
.....	JTSS1600H-L	Model Label (not shown)		1
.....	JTSS1600H-WR	Warning Label (not shown)		1

Wiring Diagram for JTSS-1600H Panel Saw

	colour of strands	Litzenfarben	couleur des cordons
BK	black	schwarz	noir
WH	white	weiß	blanc
BU	blue	blau	bleu
YE	yellow	gelb	jaune
RD	red	rot	rouge
BN	brown	braun	brun
GY	grey	grau	gris
GNYE	green-yellow	grün-gelb	vert-jaune
OG	orange	orange	orange
VT	violet	violett	violet

	meaning of symbol	Bedeutung der Zeichen	interprétation
M	motor	Motor	moteur
S	switch	Schalter	interrupteur
C	condenser	Kondensator	condensateur
E	electronic unit	Elektronik Einheit	unité électronique
F	fuse	Sicherung	fusible
RS	reversing switch	Drehrichtungsschalter	commu. droite/gauche
CS	centrifugal switch	Fliehkraftschalter	déclencheur centrifuge
OL	overload cut-off	Überlastschuttschalter	déclencheur surcharge
LS	limit switch	Positionsendschalter	micro

JR 043.....~230V, 50Hz

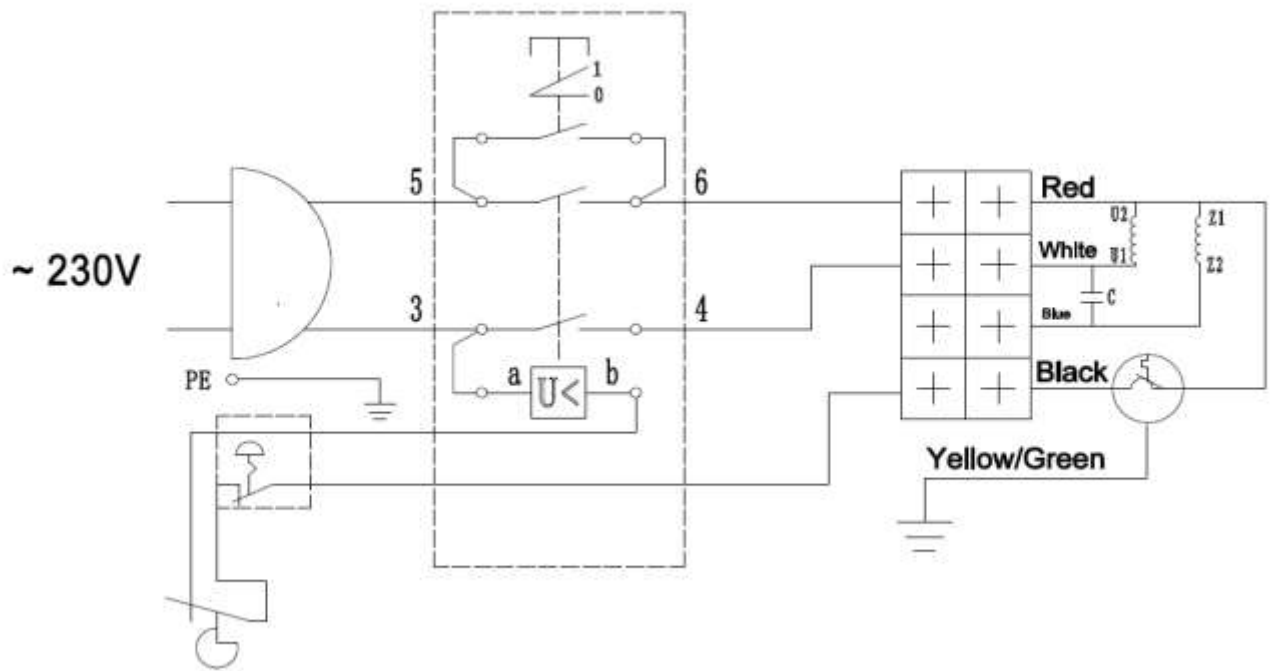

Wiring Diagram for JTSS-1600H Panel Saw

JR 099.....~230V, 50Hz

